

Compact Regulator

ARX20 Series

2.0 MPa compatible, piston type compact regulator



- Compatible with inlet supply pressure of 2.0 MPa
- Employs a knob shape for easy operation
- Compact type (face to face dimensions 35 mm, overall length 80 mm)
- Ideal for discharge pressure adjustment on a small compressor
- Piston type**
- Ideal for pressure adjustment of air blowing applications
- 3 out ports for convenient use

Compact Regulator ARX20 Series

How to Order

ARX2 **0** — **01** **□**

Regulator for 2 MPa

Regulating pressure range

0	0.05 to 0.85 MPa
1 Note 1)	0.05 to 0.30 MPa

Thread type

Nll	Rc
N	NPT
F	G

Port size

01	1/8
02	1/4

Option

Nll	None		
B	Bracket	1348112	
G	Pressure gauge Note 2)	ARX20- Nll <input type="checkbox"/> F <input type="checkbox"/>	G36-10-01 G46-10-02
		ARX21- Nll <input type="checkbox"/> F <input type="checkbox"/>	G36-4-01 G46-4-02
	ARX20-N <input type="checkbox"/>	G36-P10-N01-X30 G46-P10-N02-X30	
	ARX21-N <input type="checkbox"/>	G36-P4-N01-X30 G46-P4-N02-X30	
P	Panel nut		1348110A

Option combination numbers

B	BG	* Panel nut is also included with B.
G	GP	
P		

Note 1) Compared with ARX20, ARX21 is the product which adjusting spring has only been changed.

It is not the product, which does not allow the pressure more than 0.3 MPa.

Note 2) Pressure gauges are shipped together, (but not assembled).

Specifications




Symbol



Model		ARX20
Regulator construction		Piston type regulator
Relief mechanism		Relieving type
Port size		Rc 1/8, 1/4
Pressure gauge port size		Rc 1/8, 1/4
Proof pressure		3.0 MPa
Maximum operating pressure		2.0 MPa
Regulating pressure range	Standard type	0.05 to 0.85 MPa
	Low pressure type	0.05 to 0.3 MPa
Fluid		Air
Ambient and fluid temperature		-5 to 60°C (No freezing)
Weight		110 g


Flow Rate Characteristics (Representative Value)

ARX20-01

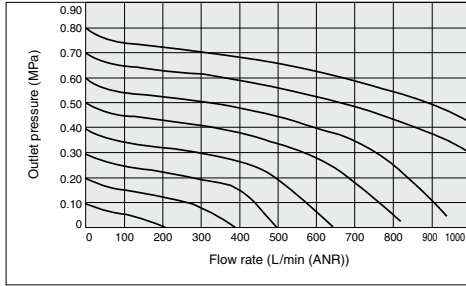


Inlet pressure: 2.0 MPa


ARX20-02

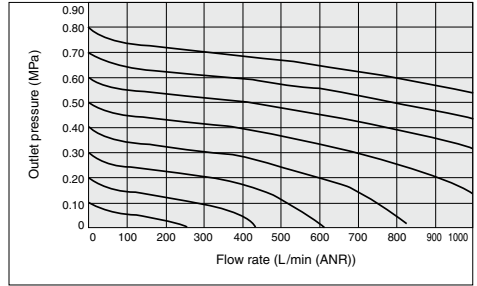

ARX21-01

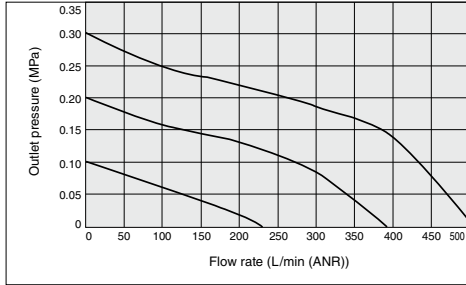


ARX21-02

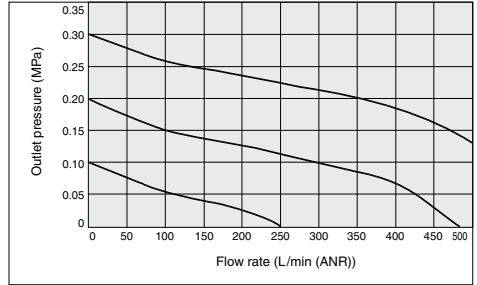

Pressure Characteristics (Representative Value)


ARX20

Inlet pressure: 2.0 MPa
Outlet pressure: 0.8 MPa
Flow rate: 60 L/min (ANR)

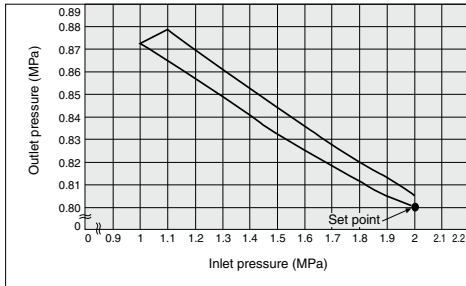

ARX21



Inlet pressure: 2.0 MPa
Outlet pressure: 0.3 MPa
Flow rate: 60 L/min (ANR)

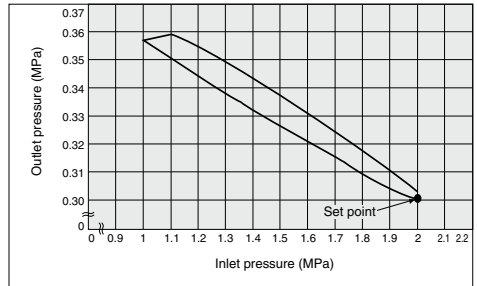

ARX20 Series

Construction

Symbol

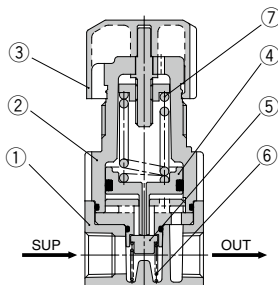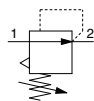


Component Parts

No.	Description	Material	Note
1	Body	ADC	Chromate treated
2	Bonnet	POM	

Replacement Parts

No.	Description	Material	Part no.
3	Knob	POM	1348102#1
4	Piston assembly	POM, NBR	1348104A
5	Valve	Brass, NBR	1348114#1
6	Valve spring	Stainless steel	1348109
7	Adjusting spring	Steel wire	1348108 (For 0.85 MPa) 1348108-1 (For 0.3 MPa)

Dimensions

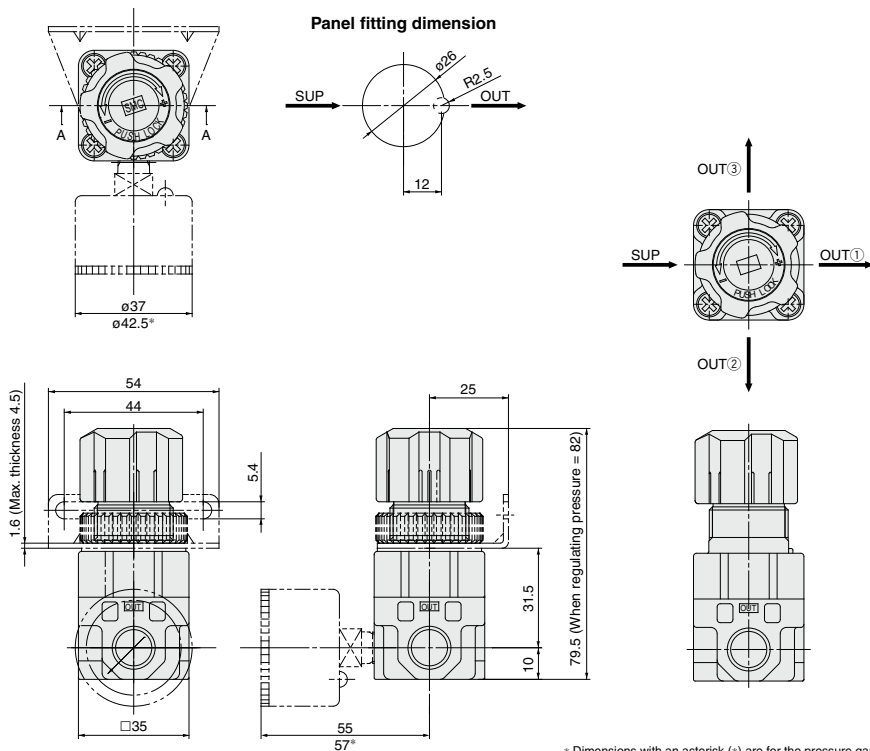


Option

Panel Nut

Part no.	1348110A
Material	POM, NBR (Gasket)


Dimensions

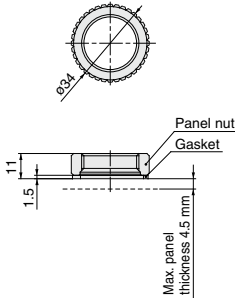

Bracket

Part no.	1348112#1
Material	SPCC (Zinc chromated)

Dimensions

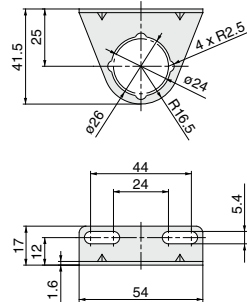

* Install the gasket underneath the panel and bracket (bonnet side).
Tighten the panel nut by hand without the use of tools.

⚠ Precautions

Be sure to read this before handling the products.
Refer to page 9 for safety instructions and pages 13 to 17 for precautions on every series.

Design and Selection

⚠ Warning

- 1. Confirm the set pressure range.**
Be sure to install safety devices in locations where output pressure above the set pressure range could lead to damage or malfunction of equipment in the outlet side.
- 2. Residual pressure relief without inlet pressure.**
When the inlet pressure is relieved with the outlet pressure in a low pressure setting state, it may not be possible to eliminate the outlet pressure (residual pressure relief). Provide a residual pressure relief circuit when reliable elimination of the outlet pressure must be performed.

⚠ Caution

- 1. When operating at an inlet pressure lower than the inlet pressure used in the flow rate characteristics graph, the pressure drop on the outlet side may be greater. Therefore, be sure to conduct testing using the actual equipment.**
For pressure control equipment selection, refer to the "Product Selection Guide."

Mounting

⚠ Caution

- 1. To set the correct pressure**
1) Set the pressure by increasing from a lower pressure to the desired setting, and lock the knob after the pressure is set.
2) Make connections after confirming the "SUP" mark which indicates the air inlet. Reversed connections will cause malfunction.